

# GANT

## TIME


### STAMFORD

#### USER INSTRUCTIONS

#### SPECIFICATIONS

GANT ID NO: 7066  
MOVEMENT NO: 6P89  
BATTERY: SR621SW

#### DISPLAY

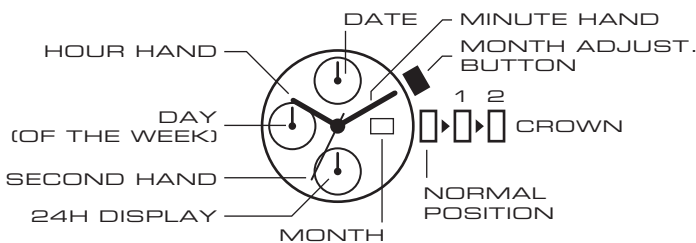

#### SETTING THE DAY AND TIME

The hour, minute, second and day are set by the same operation.

#### SETTING THE DAY

1. Pull the crown out to position 2 to stop the second hand at 0 (12 o'clock).
2. Turn the hour/minute hands in a clockwise direction to set a day. In order to set the day, you must advance the hour hand by 24 hours per day.

#### NOTE:

- If the day is set by turning the crown counterclockwise, there is the possibility the date will not change over.
- Do not set the day by turning the crown in counterclockwise direction.
- The day changes somewhere between 0:00 a.m. and 5:30 a.m. or a little later.

#### SETTING THE TIME

After setting the day, set the hour and minute hands.

1. Turn the hour/minute hands in a clockwise direction to set the time. To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.
2. After setting the time, use a time signal to synchronize the watch by pushing crown to the normal position to start the second hand going.

#### NOTE:

- Make sure you have correctly set AM/PM before setting the time. When the day changes over, it is a.m. (Day changes over between 0:00 a.m. and 5:30 a.m. or little later)

#### SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to position 1. Turn the crown counterclockwise to set the date quickly.

#### NOTE:

- Do not set the date between the hours 9:00p.m. and 0:30a.m.. The date may not change correctly the next day.

#### SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time. Be sure to press firmly on the button when making month changes.

#### NOTE:

- Do not set the month when the date hand is between the 26th and 31st. Move the date hand out of this period. After this operation, return the date hand to the proper setting. (When the date hand is between the 26th and 31st, month quick setting can not be made or if a quick setting is attempted, the month may not advance to the next month as normal.)
- The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month. The month disc changes around midnight of the 31st.